



Maintenance Kit Instructions

HP Color LaserJet CP4025 , CP4525 , CM4540

HP calls this a "maintenance kit" -- however, the only item in the official kit is a fuser.

(No feed rollers or pickup rollers are included. If you really need the feed rollers give us a call, they are hard to find and very expensive. The availability of the rollers and price changes frequently.)

NOTE ABOUT FUSER CORE EXCHANGES

If you purchased this maintenance kit at the discounted exchange price, you are agreeing to send us your old fuser within 30 days of purchase.

Please send your defective fuser back in the box we sent along with the included Return Authorization Sheet. Return shipping charges are your responsibility. The shipping address and return instructions are included in the box.

If you purchased the fuser on exchange and the fuser core is not received within 45 days, a core charge will be issued to your credit card.

Fuser

△ **CAUTION:** The fuser might be hot. Turn off the printer and allow enough time after turning off for the fuser to cool.

1. Open the right-door assembly.

Figure 6-18 Remove the fuser (1 of 2)



2. Grasp the handles and squeeze the blue release levers.
Pull the fuser straight out of the product to remove it.

Figure 6-19 Remove the fuser (2 of 2)



3. Insert the new fuser.
4. If you purchased the fuser at the exchange price, be sure to return your used fuser to PrinterTechs. Re-use the original packaging, and include a copy of the RMA form.